

A blue globe with a red number 2 is positioned in the background. The globe shows some dark spots, possibly representing continents or craters. The number 2 is stylized and has a red-to-orange gradient with a white outline.

# 月光宝盒

PANDORA'S BOX

**User Manual**

使用说明书

Enjoy Life With Quality




# 1.JAMMA Interface Definition

2P TABLE (Solder Side)		1P TABLE (Parts Side)	
GROUND	A	1	GROUND
GROUND	B	2	GROUND
+5V	C	3	+5V
+5V	D	4	+5V
N/C	E	5	N/C
+12V	F	6	+12V
N/C	H	7	N/C
N/C	J	8	N/C
N/C	K	9	N/C
SPEAKE-	L	10	SPEAKE+
N/C	M	11	N/C
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
N/C	R	14	GROUND
N/C	S	15	N/C
COIN SWITCH #2	T	16	COIN SWITCH #1
2P START	U	17	1P START
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P BUTTON #1	Z	22	1P BUTTON #1
2P BUTTON #2	a	23	1P BUTTON #2
2P BUTTON #3	b	24	1P BUTTON #3
2P BUTTON #4	c	25	1P BUTTON #4
2P BUTTON #5	d	26	1P BUTTON #5
2P BUTTON #6	e	27	1P BUTTON #6
GROUND	f	28	GROUND

## 2.System Setting

Press the setup button(Picture 2) at the side of cartridge,will enter into the setup menu(Picture 3):

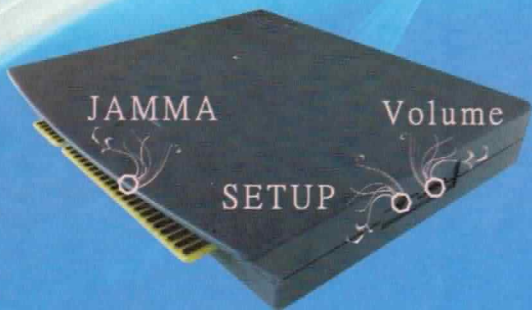

Picture 2



Picture 3

**(1) CREDIT MODE:** Press A button to select credit mode(1 coin 1 credit/2 coins 1 credit etc)

**(2) EXIT GAME:** Press A button to select exit game mode. MENU/exit to menu ;START+COIN/hold P1 start button and insert coin will exit game.

**(3) AUTO EXIT:** Press A button to select. AFTER 3 MINUTES/will exit game if no playing over 3 minutes; OFF/this function will be closed.

**(4) SELECT GAME:** Press A button to select. WITH COIN/can only select game after insert coin; ANY/can select game without insert coin.

**(5) GAME CONFIGURATION:** Press A button enter into setting menu(Picture 4)



## Difficult & Lives

Press A button enter into the difficult & lifes setting menu (Picture 5). Move the joystick to pick up the game you want to setup, press A button to set the difficult; press B button to set the lifes (can not modify if the game does't have this option); press C button to unified all games' setting same as current game; press D button to exit the setting.





## Display/Hide game

Press B button enter into the display/hide setting menu (Picture 6). Move the joystick to pick up the game you want to setup, press A button to display/hide; press B button will display all games; press C button will hide all games; press D button exit the setting.



Picture 6

## 6. Save setting & restart

Press A button to save the setting.



Picture 7

## 7. Factory setting & restart

Press A button will return to factory setting



月光宝盒

PANDORA'S BOX

*Thank you for using our products!*

 **JAMMA  
BOARDS**  
COM